



POS.	TEILE-NR.	BEZEICHNUNG	POS.	TEILE-NR.	BEZEICHNUNG
1	19014402	Gehäuse	21	19014422	Ventilschraube
2	19014403	Dämpfer	22	19014423	Kugellager
3	19014404	Scheibe	23	19014424	Hint. Rotordeckel
4	19014405	O-Ring	24	19014425	Zylinderstift
5	19014406	Deflektor	25	19014426	Zylinder
6	19014407	Luftanschluß	26	19014427	Rotor
7	19014408	Spannmutter	27	19014428	Rotorblatt (4)
8	19014409	Vorspannstift	28	19014429	Vord. Rotordeckel
9	19014410	Betriebshebel	29	19014430	Kugellager (2)
10	19014411	Vorspannstift	30	19014431	Distanzring
11	19014412	Feder	31	19014432	Spannzange
12	19014413	Anschlag	32	19014433	Spannmutter
13	19014414	Ventilbuchse	33	19014434	Gabelschlüssel 11mm
14	19014415	Ventilstößel	34	19014435	Gabelschlüssel 17mm
15	19014416	O-Ring	35	19014436	Stift
16	19014417	O-Ring	36	19014448	Spindel
17	19014418	Feder	37	19014449	Gummidichtung
18	19014419	Regler	38	19014437	Sieb
19	19014420	O-Ring	39	19014446	Zu-u. Abluftschlauch
20	19014421	O-Ring	40	19014447	Spannmuffe